NANO-MASTER Optical Coating Systems

NOC-4000 Dual Chamber Optical Coating System



The NANO-MASTER NOC-4000 Optical Coating System provides state of the art atomic cleaning and polishing of optical samples in one chamber and automated sample transfer to a second chamber for optical coating without breaking vacuum. The system can also use the chamber sindependently, each with its own automatic sample loading and unloading.

Applications

- Optical Coatings
 - Sputtering
 - IBAD
- Ion Beam Etching Cleaning
- Ion Beam Assisted Reactive Etching
- Infrared Coatings
- Surface Treatment

Features

- RF Biasable Platen
- Thickness Monitor
- 5 10⁻⁷ Torr Base Pressure
- High Accuracy and Repeatability
- High Quality Films
- Atomic Level Clean Surfaces
- Atomic Cleaning and Polishing
- PC Controlled with LabVIEW
- Automatic Load/Unload
- Automatic Transfer Between Chambers
- Recipe Driven, Password Protected
- Safety Interlocks
- 46"D x 44"W Footprint


Options

- Sputter Down/Up
- Co-Sputtering
- DC, RF and Pulsed Power Supplies
- Ion Beam Assisted Deposition
- E-Beam Sources
- Plasma Sources

NANO-MASTER Optical Coating Systems

NOC-4000 Dual Chamber Optical Coating System



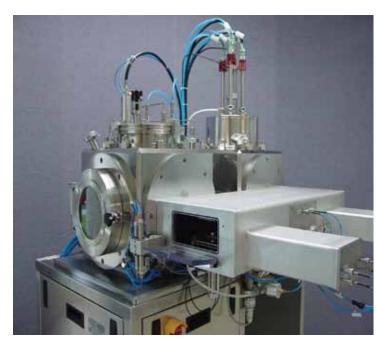

Load Lock and Automatic Transfer Between Chambers w/o Exposure to Atmosphere



Ion Beam Cleaning Chamber with Tilted Platen



Sputtering Chamber with Rotating, Heated and Biasable Platen



3019 Alvin Devane Blvd., Suite 300, Austin, Texas 78741 Ph. 512-385-4552; Fax 512-385-4900 main@nanomaster.com; www.nanomaster.com